Iso Technical Specification

Soap Dish & Toothbrush Holder/Tumbler

DN0744 & DN0745 DN0766 & DN0767


Stock Numbers:

- DN0744CH Toothbrush Holder/Tumbler Chrome Finish
- DN0745CH Toothbrush Holder/Tumbler
 Chrome Finish
 Glass Tumbler
- q **DN0766CH –Soap Dish** Chrome Finish
- DN0767CH –Soap Dish
 Chrome Finish
 Glass Dish

Materials:

Toothbrush holder/Tumbler and Soap dish posts are constructed of zinc. DN0744 tumbler is constructed of plastic. DN0745 tumbler is constructed of glass. DN0766 dish is constructed of plastic. DN0767 dish is constructed of glass.

Dimensions:

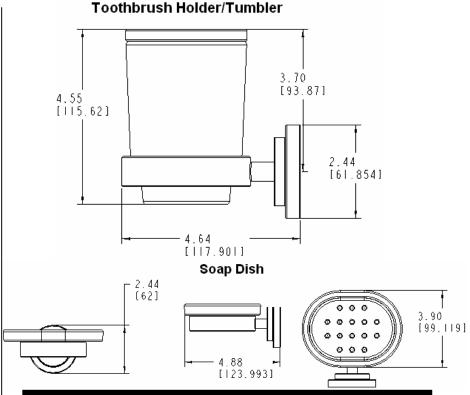

Installation Instructions:

Directions below are for installation into drywall. If installing product into a stud, use the wood screws only.

- Position the EZ 2 Install Mounting System wall bracket on the wall at desired location with the word "UP" facing you and upright; mark both vertical hole locations checking to ensure that the vertical holes are level
- 2. Drill 2 holes as marked using 5/16" drill bit
- Fold ends of the plastic toggle anchor together and insert into each hole in the wall.
- 4. Lightly tap anchors until flush with the wall.
- One at a time, insert plastic pin into each anchor and lightly tap to activate anchor. Remove pin and repeat on other anchor.
- 6. Secure the EZ 2 Install wall bracket to the wall by inserting 2 screws through the wall bracket holes and into the anchors. Tighten screws.
- Place product post over EZ 2 Install wall bracket and slide down to lock into place.

Cleaning Instructions:

To preserve the fine finish of this product, clean only with a soft damp cloth. Dry well. Do not use commercial or abrasive cleaners.

Stock Number:	Liquid Soap Dispenser &
Toothbrush Holder By Creative Specialties	



25300 AL MOEN DRIVE • NORTH OLMSTED, OH 44070 CORPORATE HEADQUARTERS: (800) 321-8809 • FAX: (800) 848-6636 INTERNATIONAL: (440) 962-2000 • FAX: (440) 962-2726 CUSTOMER SERVICE (USA): 800-882-0116 • FAX: (888) 379-2720 WWW.CSI.MOEN.COM