


EDGESTAR[®]

Portable Air Conditioner

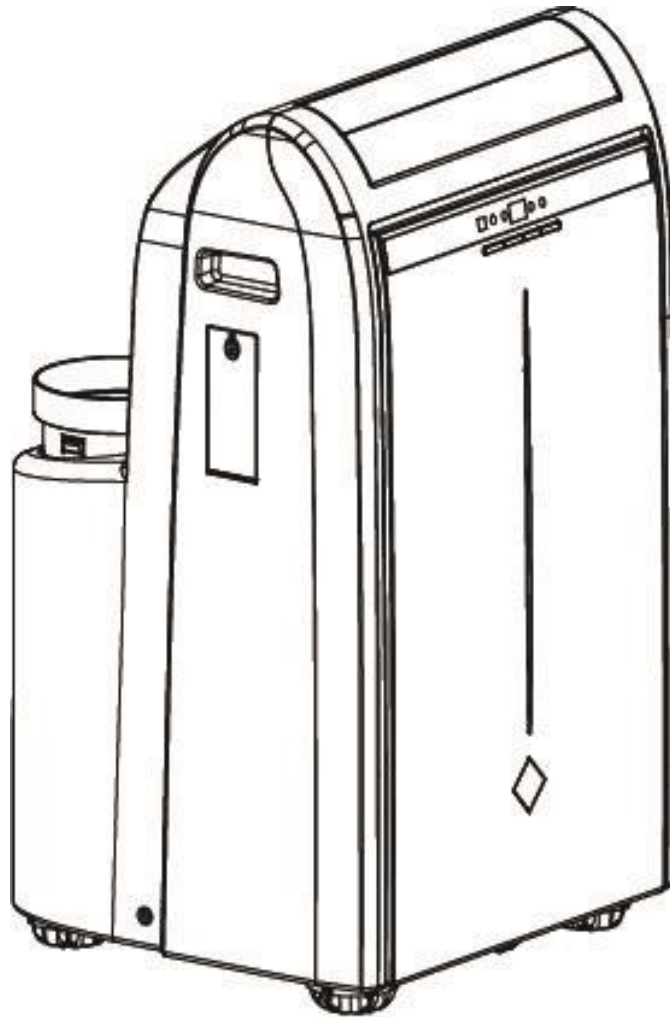

AP16000G

Owner's Manual

*For more information on other great EdgeStar products on the web, go to <http://www.edgestar.com>
To use the EdgeStar self-diagnostic tool, go to <https://support.edgestar.com>*

Important Safety Information

Improper handling can cause serious damage to the appliance and / or to the user. Please read the following safety information.



Electrical Safety

- This unit is designed for indoor use only.
- Do not use the unit in extremely humid or wet environments.
- Do not wet the housing or control panel.
- Do not pull the unit by the cord.
- Always turn the unit off and unplug it from the outlet when cleaning.
- Unplug the unit if it is not going to be used for a long period of time.
- Do not operate the unit with a damaged plug or loose socket.
- Use only the correct power supply with appropriate amperage.
- If the power cord is damaged, it must be replaced by the manufacturer, a service agent, or a qualified technician.
- Do not remove any part of the casing unless you are instructed to do so by an authorized technician.



General Safety

- This portable air conditioner is not intended to be used by children.
- Children should be supervised to ensure that they do not play with this product.
- Do not allow children to play with the controls or drop any objects into the air outlets or vents.
- Do not place objects or let any person sit on top of the unit.
- Only use in the upright position on a flat, level surface and provide at least 12 inches of clearance from any walls or objects.
- Route the power cord carefully to avoid a tripping hazard.

Operation of Safety Plug




Note: Electrical products should not be disposed of with household waste. Please contact your local recycling center for more information about how to recycle electronic waste.



Your portable air conditioner is supplied with a Leakage-Current Detection and Interruption (LCDI) safety plug. This device provides protection to reduce the risk of fire due to arcing faults in the power supply cord. Before using your portable air conditioner, follow the instructions below to ensure that the LCDI plug is working properly:

1. Plug the power cord into a grounded outlet.
2. Press the TEST button on the LCDI plug. This should trip the plug and cut the power to the air conditioner. If the plug does not trip and you are able to turn on the unit, please contact EdgeStar support.

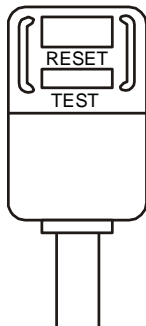

DO NOT USE YOUR PORTABLE AIR CONDITIONER IF THE TEST FAILS.

Press the RESET button to start using your air conditioner.

DO NOT use the TEST and RESET buttons as an ON / OFF switch.

Table of Contents

IMPORTANT SAFETY INFORMATION	I
IMPROPER HANDLING CAN CAUSE SERIOUS DAMAGE TO THE APPLIANCE AND / OR TO THE USER.	I
OPERATION OF SAFETY PLUG	II
TABLE OF CONTENTS	III
INTRODUCTION.....	1
PARTS IDENTIFICATION	2
Front View	2
Back View	2
WINDOW KIT AND EXHAUST HOSE INSTALLATION.....	3
Parts Included	3
Suggested Tools	3
Preparations for Installing the Window Kit	4
Window Kit Installation Instructions	4
Installation of the Exhaust Hose	7
NOTES ABOUT THE EXHAUST HOSE	8
INSTALLING THE DRAIN HOSE.....	9
DRAINING THE UNIT.....	10
Direct Drainage	10
INSTALLING THE FILTER.....	10
OPERATING INSTRUCTIONS.....	11
Control Panel Overview	11
Remote Control.....	12
Modes and Features	13
MAINTENANCE.....	15
Cleaning the Exterior.....	15
Cleaning the Pre-Filter	15
Preparation for Storage.....	15
ENERGY SAVING GUIDE.....	16
TROUBLESHOOTING.....	17
ERROR CODES	19
SPECIFICATIONS	20
NEW PORTABLE AIR CONDITIONER BTU'S	21
What is SACC?	21
EDGE STAR LIMITED WARRANTY	22

Introduction

Thank you for purchasing this EdgeStar portable air conditioner. We hope that this purchase will be the beginning of a lasting and rewarding relationship between you and EdgeStar. We will provide the customer support and exemplary products necessary to nurture that relationship.

This manual contains important information regarding the proper installation, use, and maintenance of your portable air conditioner. Following this manual will ensure that your product will work at its peak performance, efficiency, and safety.

Please save the original product packaging in case you need to safely transport your portable air conditioner.

For Your Records:

Please write down the model number and serial number below for future reference. Both numbers are located on the ratings label on the back of your unit and are needed to obtain warranty service. You may also want to staple your receipt to this manual as it is the proof of your purchase, and is also needed for service under your warranty.

Model Number: _____

Serial Number: _____


Date of Purchase: _____

For a more efficient experience, please do the following before contacting customer service:


- If you received a damaged product, immediately contact the dealer that sold you the product.
- Read and follow this instruction manual carefully to help you install, use, and maintain your portable air conditioner.
- Read the troubleshooting section of this manual as it will help you diagnose and solve common issues.
- Visit us on the web at <http://www.edgestar.com> for product guides, additional troubleshooting resources, and up-to-date information. You can also find an interactive self-diagnostic tool at <https://support.edgestar.com>. If you need service, our friendly customer service representatives are available via email at **service@edgestar.com** or by telephone at **1 (866) 319-5473**.

Parts Identification

Front View





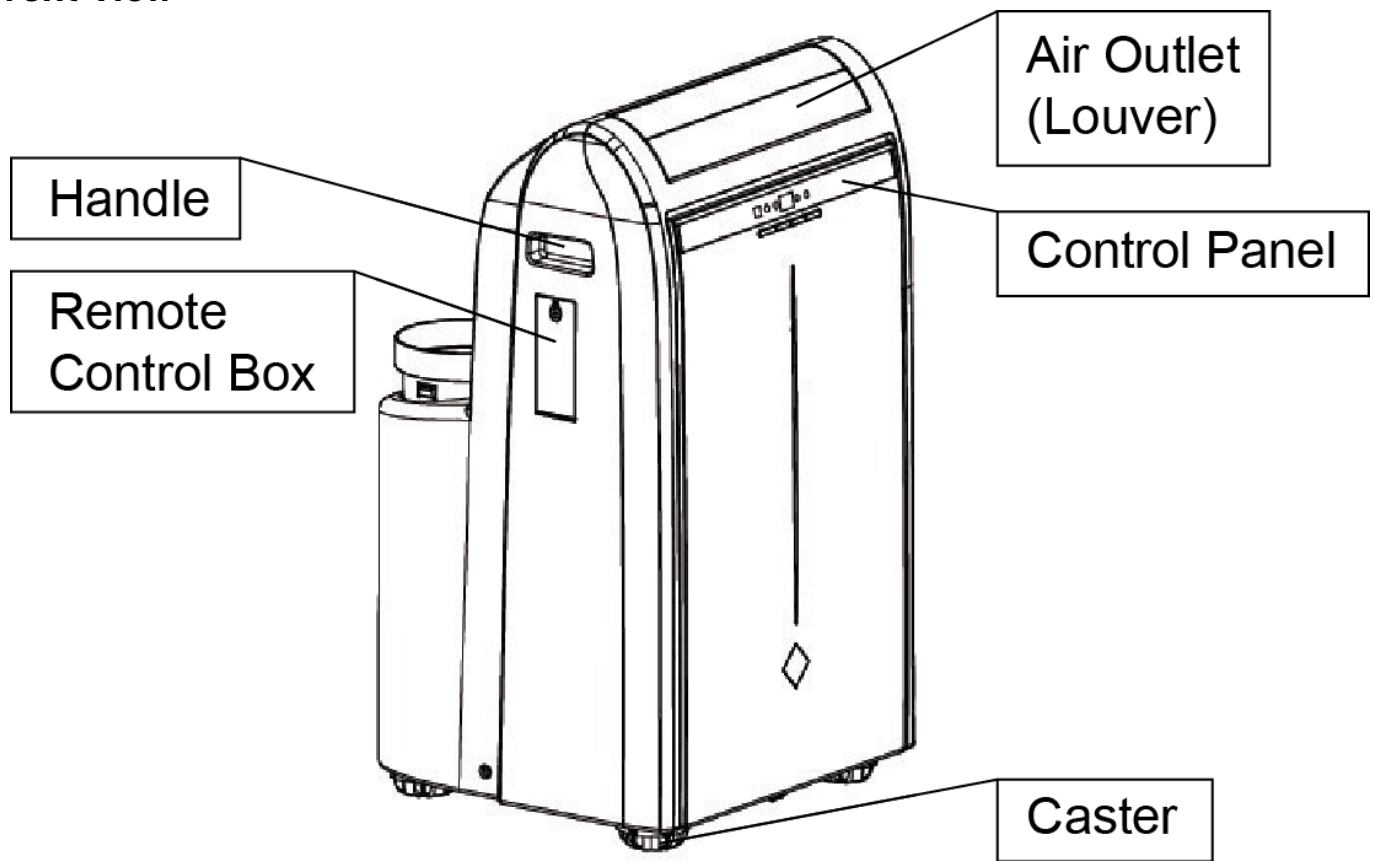




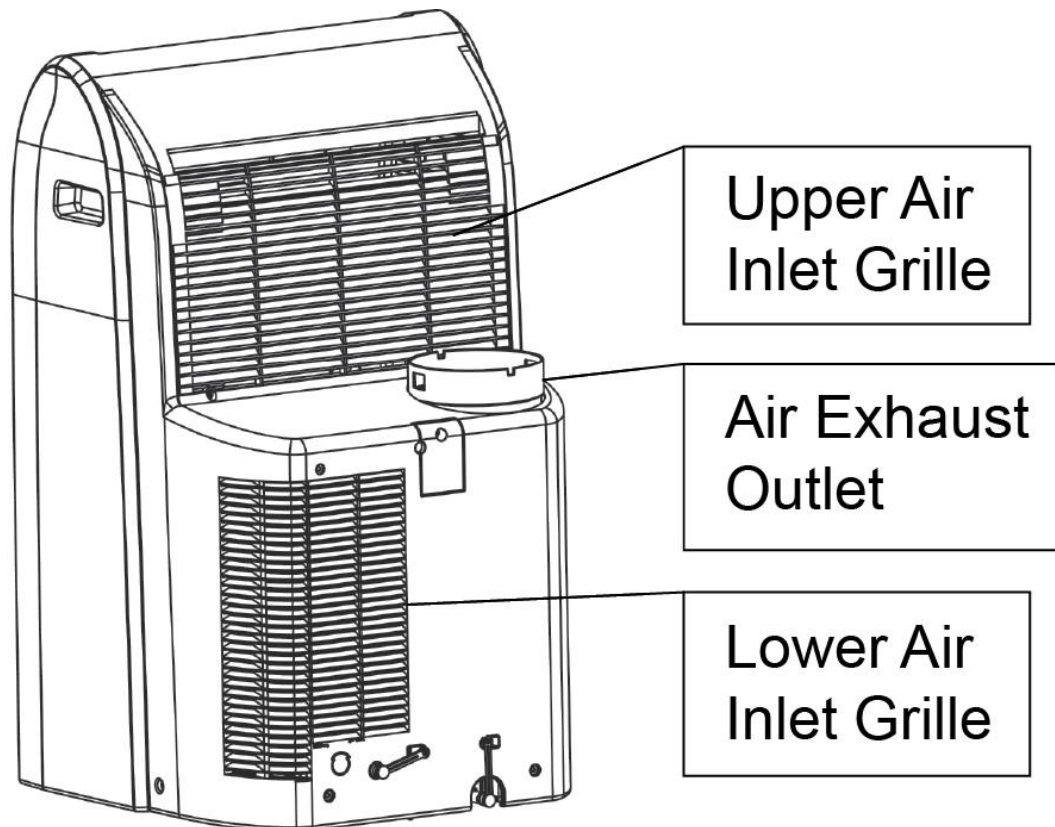




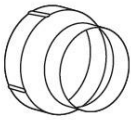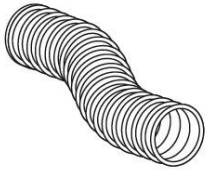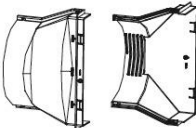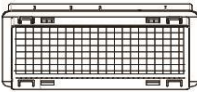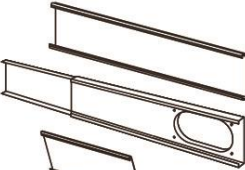


Back View

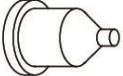

Window Kit and Exhaust Hose Installation

Parts Included

				
joint A	Flexible Exhaust Hose	Window Exhaust Adapter	protective grille	Adjustable Window Slider
				
Foam Seal	Window Locking Bracket	screw	pipe clip	rubber plug
				
pipe hoop	drainage pipe	battery (AAA 1.5V)	remote controller	user's manual

Suggested Tools

Philips Screw Driver (Medium Size), Tape Measure / Ruler, Scissors, Saw (in the event that your window panel needs to be cut down in size for installation.)

Preparations for Installing the Window Kit

You must vent your portable air conditioner when running it in Cooling mode. Your unit includes a window exhaust kit that can be used to vent moisture out of a window.

Before you begin, make sure that you have all the parts necessary for installation and that a suitable location is picked.



If you have multiple windows, choose one that is near an electrical outlet that will be able to provide sufficient power to your unit. See the power requirements listed on the product label printed on the side, or on the back of your portable air conditioner.

Your window kit can be installed on a horizontal or vertical sliding window as shown in the images below.

Please follow the installation instructions carefully to avoid personal injury or damage.




Note: You may need to contact your electrician if your room's circuit is not able to power your unit.

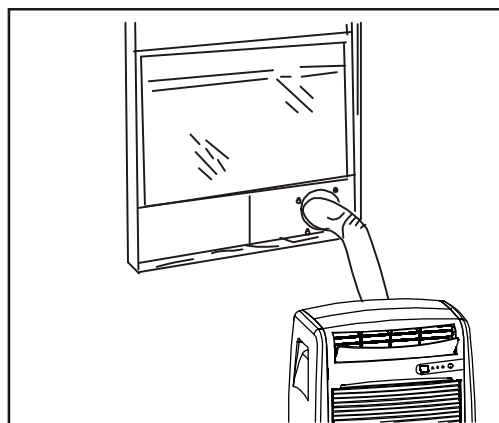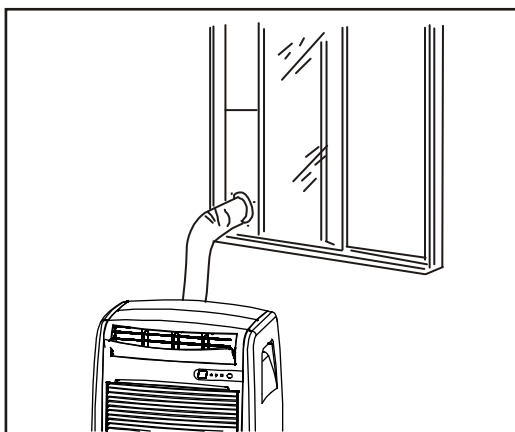

Window Kit Installation Instructions


Step 1

Attach the protective grille to the window panel. Push on the grille firmly to ensure that its four projections fit into the holes in the window panel.

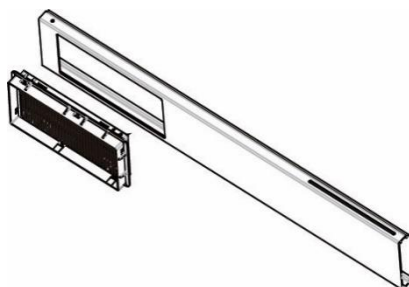

Step 2



Cut the foam seal to the proper length and attach it to the windowsill.

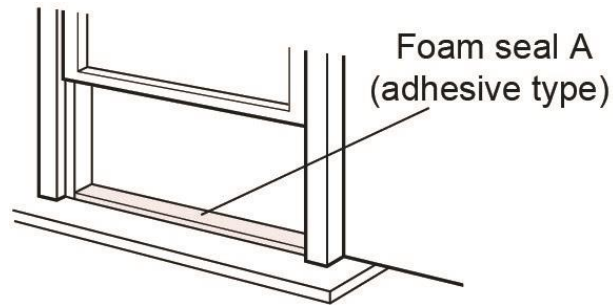

Step 3



Attach the window panel to the windowsill.

- If the inner width of the window is between 22" and 24" wide:
 - Remove the adjustment panel from the window panel, and cut the window panel to the same width as the window frame opening.
 - Open the window and place the window panel on the windowsill.
 - Secure the window panel to the windowsill.

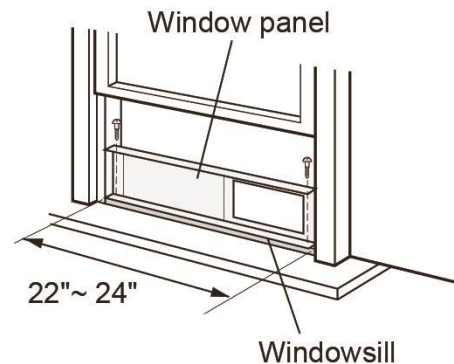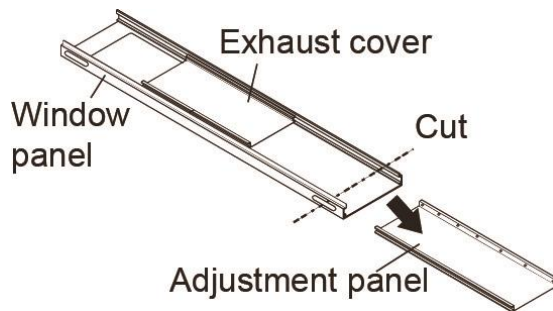


Note: The window panel cannot be installed in windows less than 22" wide as you will be unable to shut the exhaust cover.

- If the inner width of the window is between 24" and 36 ½" inclusive:
 - Open the window and place the adjustable window panel on the windowsill.
 - Slide the adjustment panel to fit the window frame width.

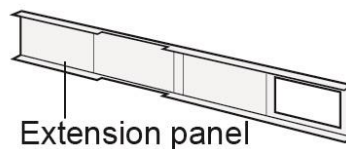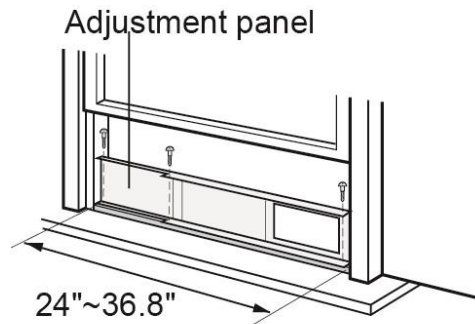


- If the inner width of the window is between 36 ½" and 64" inclusive:
 - Open the window and place the extra window panel provided on the windowsill.
 - Slide the adjustment panel to fit the window frame width.
 - Secure the window panel to the windowsill with four large wood screws and four slider brackets.

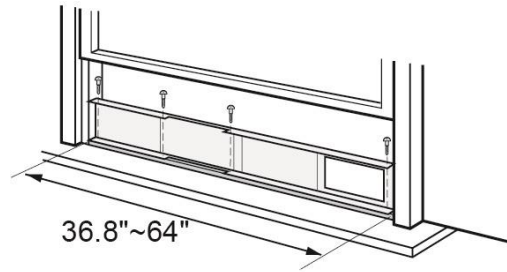


Step 4

Cut the foam seal to the proper length and attach it to the top of the window panel.

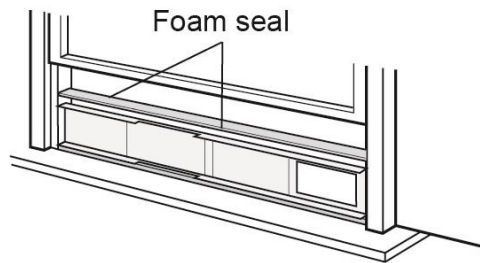

Step 5

Close the window securely against the window panel.

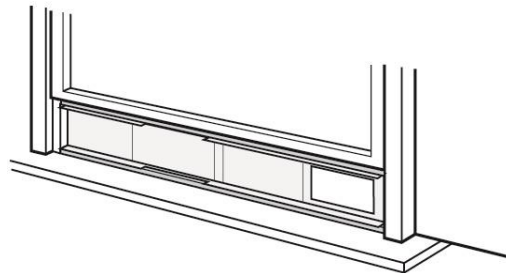


Step 6

Cut the foam seal to an appropriate length between the top of the inner window and outer window.

Step 7


Attach the bracket with a screw.

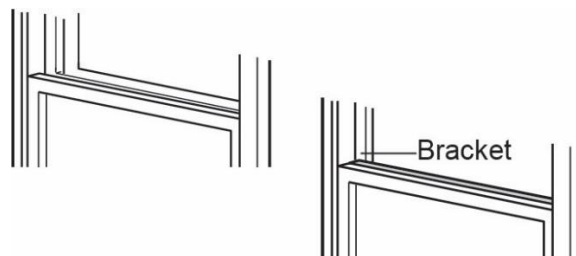

Installation of the Exhaust Hose


Step 1

Connect the two pieces of the window exhaust adapter, fix them together, and press the clasp forcibly into the groove.

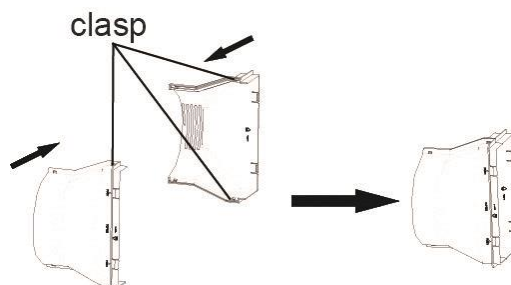


Step 2

Install the hose at the rear clip. Aim the opening of the hose at the round mouth of the rear clip. Rotate the hose counterclockwise into the rear clip.

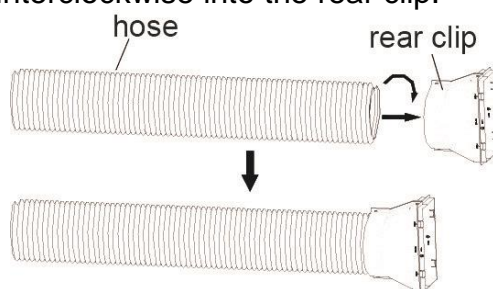


Step 3

Install the hose at the joint A. Aim the opening of hose at the round mouth of joint A. Rotate the hose counterclockwise into joint A.

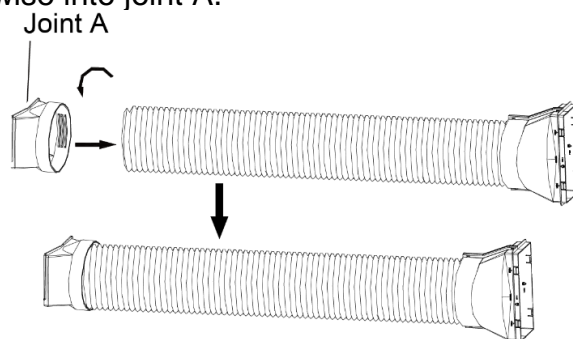

Step 4


Attach joint A to the back of the unit with the two cutouts on the joint. Line them up over the two tabs on the air exhaust outlet and firmly slide the joint A down until it clicks. To remove, make sure to push down on the two exhaust outlet tabs and then lift up.

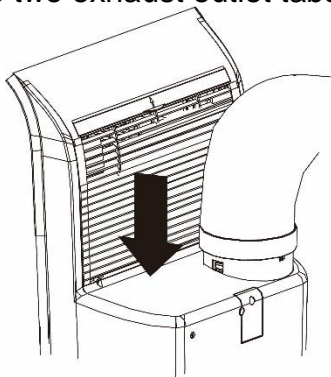

Notes About the Exhaust Hose


Your portable air conditioner is designed to exhaust condensed water that is collected from the air. This water, in either gaseous or droplet form, will be expelled out of the exhaust port of the unit. Please take this into account when deciding how to vent it.

1. The exhaust hose supplied with the portable air conditioner can be extended up to approximately 48 inches; however for maximum efficiency, use the shortest length possible.
2. Try to prevent any kinks or bends in the exhaust hose. Kinks or bends may trap exhaust air which can radiate heat into the room or potentially cause the portable air conditioner to overheat and shut itself off.
3. The exhaust hose supplied with the portable air conditioner has been specifically designed for this air conditioner. Do not lengthen the hose by adding additional hoses or attachments. Do not replace it with any other hose.

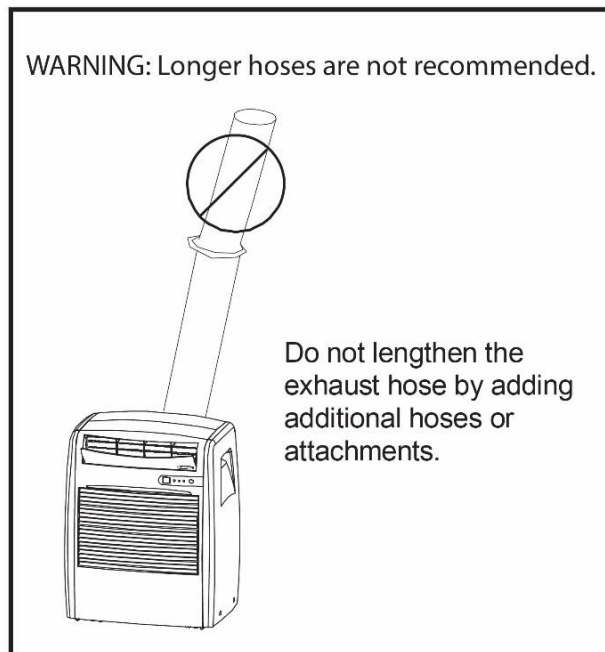


The exhaust hose should be as short as possible for operational efficiency however, it must not be twisted or bent.


Unacceptable

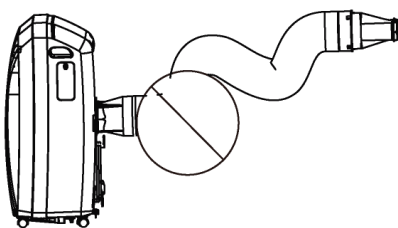

Acceptable

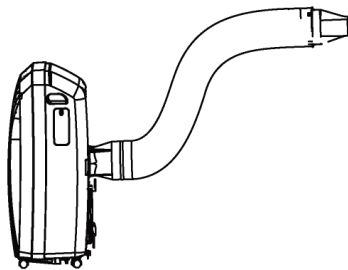

Acceptable

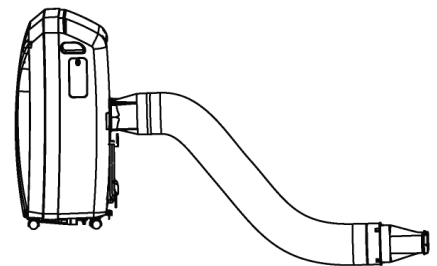


Installing the Drain Hose



Note: The drainage hose must be installed before using this unit. If it is not, a block can form in the drain and prevent the unit from functioning normally.


Step 1

Remove the rubber plug drain cap from the drainage port.

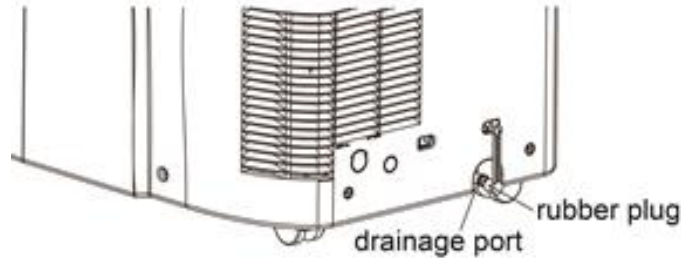


Step 2

Attach the drain pipe clip to the back panel of the air conditioner near the drain port with the screw.

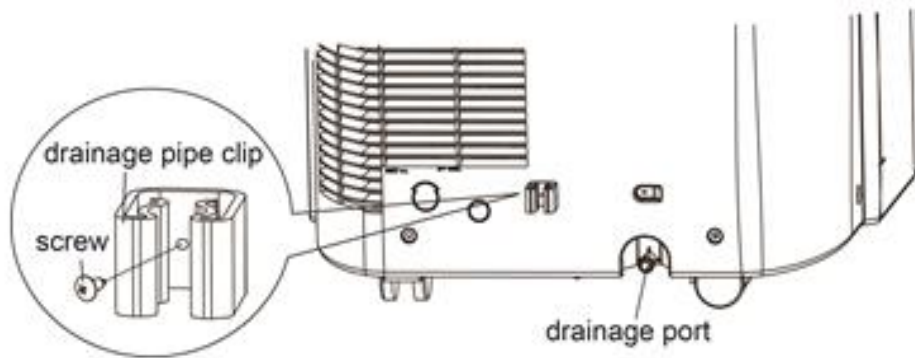

Step 3

Attach one end of the drain hose to the drain port with the clip provided.

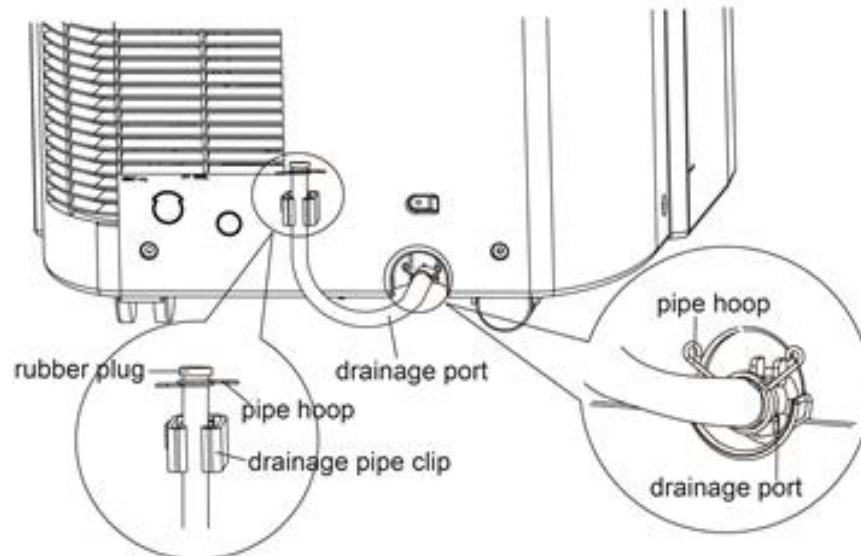

Step 4

Insert the rubber plug into the other end of the drain hose, secure it with the pipe hoop and attach it to the drain pipe clip.

Draining the Unit

When the portable air conditioner is in cooling mode or dehumidify mode, it will remove moisture from the air. The condensed water from the air will be collected in an internal reservoir and will be evaporated and exhausted out of the exhaust hose. However, in very humid conditions, the internal reservoir may fill completely. This causes the air conditioner to turn off to avoid overflowing the internal reservoir. When the water tank is full a buzzer will sound eight times and the LED window will display the error code “H8”.

Direct Drainage

1. Remove the rubber drain plug from the drain port.
2. Connect a drain hose to the drain port.



The portable air conditioner will now drain through the drain hose.

Please note that this unit has no drain pump; all water will drain with gravity only, i.e., only “downhill.”

Installing the Filter


Your portable air conditioner ships with a carbon filter to help remove any unwanted odor from the room. It is recommended you replace the filter every two to three months, or as needed. It is also necessary to clean the pre-filter periodically (see page 16 for maintenance instructions). Follow the steps below to install the carbon filter:

1. Shut off the unit if it is on. In the rear of the unit pull the air filter grille from the side.
2. Place the carbon filter between the grille and the pre-filter.
3. Close the grille.

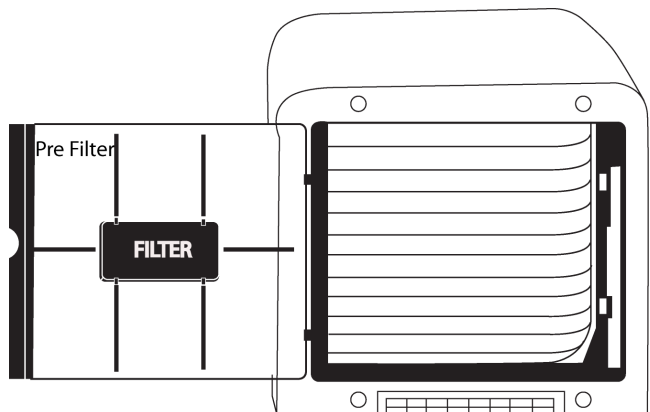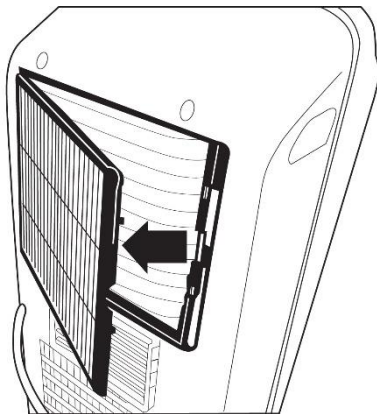

Operating Instructions


Control Panel Overview

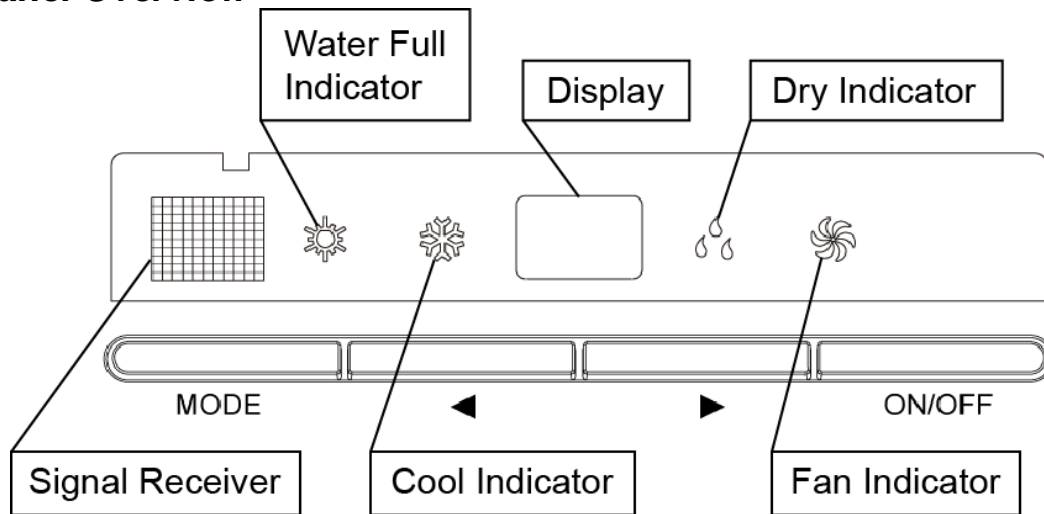

On / Off Button	Press the button once to manually turn the unit on. Press once more to turn the unit off.
◀ / ▶ Button	In COOL, press the ◀ or ▶ button to decrease or increase the temperature by 1° degree Fahrenheit. Continue to press to get to desired temperature.
Mode Button	Press the MODE button to cycle between modes: COOL → DRY → FAN. COOL: The cool indicator light will be bright. The display will show the set temperature (61° F – 86° F). DRY: The dehumidify indicator will be bright. The display will be blank. FAN: The fan indicator light will be bright. The display will be blank. <i>Remember that the exhaust hose and window kit must be installed when the unit is in Cool or Dry Mode.</i>
Fan Speed	When the unit is running in Cool or Fan mode, press the ◀ / ▶ arrow buttons to select the fan speed desired. There are 4 fan settings, High, Middle, Low, and Auto.
Water Full	When the unit is in Cool or Dry mode condensation will drain to the water reservoir. When the water tank is full a buzzer will sound eight times indicating that the tank needs to be emptied. An error code “H8” will also display on the LED screen. Please follow the instructions on how to drain on page 11.



Note: This unit has 2-Way directional louvers that move up and down. Once the unit is powered on the louvers will open to allow air flow. The remote will allow you to adjust the louver settings while the unit is in use. Once the unit is powered off the louvers will close.

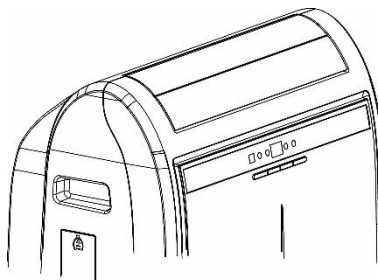




Remote Control

The remote control is used to operate all of your portable air conditioner's functions. Use the remote control to change modes, fan speed, timer, and temperature settings and sleep mode.



Note: Be careful not to drop the remote control. Do not place the remote control in a location exposed to direct sunlight.



Button	Function
On / Off	This button powers the unit on or off.
Fan	This button selects one of the following fan speeds: auto, low, medium, and high.
Mode	This button changes between Cool, Dry, Fan, and Auto modes.
 Louver	This button turns the automatic swing of the Louvers on and off.
Turbo	This button sets the fan speed to high
Sleep	This button enables sleep mode.
Light	This button turns the display screen on or off.
Timer On	This button enables an automatic start for a specific time of your choosing.
Timer Off	This button enables an automatic shutoff for a specific time of your choosing.
 Increase	This button increases the set temperature or time.
 Decrease	This button decreases the set temperature or time.
Clock	This button adjusts the clock.
X-Fan	This button enables X-fan mode.



Caution: Use only AAA batteries. Remove the batteries if the remote control will not be used for one month or longer. Do not attempt to recharge batteries that are not designed to be recharged. All batteries should be replaced at the same time. Do not mix old and new batteries. Do not dispose of batteries in a fire as they may explode.

Modes and Features

Auto

When selecting Auto Mode, the air conditioner will operate automatically according to the ambient room temperature. The set temperature can't be adjusted unless the unit is switched to Cool Mode.

Cool

If the ambient temperature drops below the temperature you selected, the compressor turns off and the unit functions with the fan only. When the temperature rises above the temperature you selected, the compressor turns on again. The Cool Indicator will be lit. You can press the "+" or "-" button to increase or decrease the set temperature.



Note: The exhaust hose must be used in cooling mode in order to cool a room.



Note: Whether your desired temperature can actually be reached depends on the ambient conditions. The room temperature remaining slightly above the set temperature is normal.

To operate the unit in cooling mode:

1. Make sure the power cord is plugged into a power outlet.
2. Press the ON / OFF button on the remote.
3. Press the Mode button until the Cool Indicator Light on the Control Panel lights up.
4. Select the fan speed by using the Fan button.
5. Set the thermostat by using the "+" and "-" buttons on the remote. The thermostat is adjustable between 61° F and 86° F in one degree increments.

Dry

When dry mode (or dehumidify mode) is selected, the air conditioner operates under dry mode at a low fan speed. The Dry Indicator light will be lit. Under dry mode the fan speed can't be adjusted.

Fan

Fan Only mode is used to circulate the air in your room. No temperature setting is needed.





Note: Fan Only mode does not require that the exhaust hose be attached.



To operate the unit in Fan Only mode:

1. Make sure the power cord is plugged into a power outlet.
2. Press the ON / OFF button on the remote.
3. Press the Mode button until the Fan Indicator light on the control panel illuminates.
4. Press the Fan button to adjust the fan speed.

Timer On

While the unit is off press the Timer On button to set the unit to turn on at a certain time in either Cool, Dry, or Fan mode. After pressing this button, the  icon disappears and the word "ON" will blink on the remote. Press the "+" or "-" button to adjust the Timer On setting. Pressing the "+" or "-" button will increase or decrease the time by 1 minute. Hold the "+" or "-" button to quickly adjust the time. Press the Timer On button again to confirm the time. The word "ON" will stop blinking and the  icon will reappear. The Timer On function will be enabled. Pressing the Timer On button again will cancel the Timer function.

Timer Off

While the unit is on press the Timer Off button to set the unit to turn off at a certain time. After pressing this button, the  icon disappears and the word "OFF" will blink on the remote. Press the "+" or "-" button to adjust the Timer Off setting. Pressing the "+" or "-" button will increase or decrease the time by 1 minute. Hold the "+" or "-" button to quickly adjust the time. Press the Timer OFF button again to confirm the time. The word "OFF" will stop blinking and the  icon will reappear. The Timer Off function will be enabled. Pressing the Timer Off button again will cancel the function.

Sleep

Pressing the Sleep button on the remote will turn Sleep mode on or off. The Sleep function can be activated during Cool mode. The setting temperature will increase slightly once activated but the max temperature will not exceed 86° F.

X-Fan

The X-Fan mode will operate the indoor fan at low speed to remove any residual moisture through the exhaust hose.

Maintenance

Clean the air conditioner and filters regularly to maximize performance and efficiency, and to prolong the unit's life. Be sure to always unplug the air conditioner from the power outlet before cleaning.

Cleaning the Exterior

Use a soft dry cloth to wipe the body of the air conditioner clean. If necessary, use lukewarm water to dampen a cloth to clean the unit.

Use a soft bristle brush to clean between the vents.

Carefully use a vacuum cleaner to clean the condenser coils.

Never use abrasive chemicals, volatile substances, gasoline, detergents, chemically treated cloths, or other cleaning solvents that may damage the cabinet exterior.



Warning: Never spray water directly on the unit.

Cleaning the Pre-Filter

To clean the pre-filter, follow the steps below:

1. Power off the unit and remove the pre-filter.
2. Remove the activated carbon filter.
3. Use a vacuum cleaner or tap the pre-filter lightly to remove loose dust and dirt, then rinse thoroughly under lukewarm running water (below 104° F). You may use a mild soap and water solution if needed.
4. Allow the pre-filter to air dry in a cool and shaded place. Dry the pre-filter thoroughly before reinstalling it.

Clean the pre-filter periodically. If the unit is used in a dusty environment you may need to clean it on a weekly basis.



Warning: Never operate the unit without the pre-filter.



Note: Filters should be replaced every 2 – 3 months or as needed. Contact EdgeStar retailers for replacement filters.

Preparation for Storage

If you are not going to be using the unit for an extended period of time, follow the instructions below before storing your unit:

1. Drain all the water from the unit's reservoir. Operate the unit in fan mode for a few hours to thoroughly dry any moisture left on the coils inside the unit.
2. Power off the unit. Then clean or change the filters.
3. Unplug and carefully wind the power cord.
4. Remove the exhaust hose and duct connectors and keep them in a safe place.

Energy Saving Guide

Read and follow the guide below to get the best performance and efficiency from your portable air conditioner:

- Do not cover the air outlet (exhaust) while the unit is in use.
- Do not place the unit in front of curtains or drapes to ensure they do not obstruct the air intake.
- Minimize the length of the exhaust hose.
- Make sure the exhaust hose is as straight as possible and avoid kinks or bends.
- Keep curtains, blinds, or drapes closed during the sunniest part of the day.
- Use the timer to operate the unit before it is needed. For example, set the timer to turn on the unit in cooling mode for 3 or more hours to cool the room before you arrive. You may want to operate the unit all day if you live in a warmer climate.
- Minimize the heat sources (direct sunlight, computers, servers, people, etc.) in the room.
- Close all windows and doors.
- Use the unit in a contained room. For example, operate the unit in a room with four walls and a ceiling, instead of a partitioned studio, or warehouse.
- Make sure the unit is on a level surface.
- Minimize the amount of humidity in the room. For example, run the unit as a dehumidifier.
- To prolong the compressor's life, please wait at least 3 minutes before turning the unit back on after shutting it off.
- Inspect and clean the pre-filters regularly.
- Inspect and replace the activated carbon filters regularly.
- Perform routine maintenance.

Troubleshooting

Follow the troubleshooting guide below to resolve common issues.

Issue	Possible Cause	Solution
My air conditioner is not functioning at all.	The unit is not receiving power.	Make sure the unit is plugged in to a grounded outlet.
	The LCDI power cord is tripped.	Press the Reset button on the LCDI cord.
	There is insufficient power.	Move the unit to another outlet. Check your circuit breaker. (Refer to the rating label on the back of the unit to determine the Amperage draw).
	The water reservoir is full.	Drain the unit and restart it.
	The control panel is disconnected.	If no indicator lights turn on, contact customer service.
My remote control does not work and the indicator light on the remote does not turn on.	The batteries are not installed.	Install new batteries.
	The batteries are bad.	Replace the batteries.
	The batteries are installed incorrectly.	Reinstall the batteries correctly.
	The remote control is defective.	Contact customer service.
My air conditioner is making a loud noise.	The unit is not level.	Make sure the unit is on a level surface.
	A foreign object has jammed the fan.	Remove the object from the fan.
	The floor below the unit is uneven.	Move the unit to a level surface.
My air conditioner is making a continuous metallic knocking or pinging sound.	The unit may have been shipped on its side.	Shut off the unit. Let the unit sit on a level surface for at least 24 hours and restart it.
	The compressor is damaged.	Contact customer service.
My air conditioner is leaking.	The drain plug is removed.	Attach the drain plug.
	The base pan is cracked.	Contact customer service.
My air conditioner runs for a little while and then it trips the power cord or the circuit breaker.	The air conditioner may be plugged into an outlet that cannot supply the correct amount of current.	Contact an electrician if the unit works in a different room or on a different circuit.
The control panel lights blink randomly.	The unit may have a faulty control panel.	Contact customer service.

Issue	Possible Cause	Solution
My air conditioner is not cooling at all.	The unit is not operating in cooling mode.	Set the unit to be in cooling mode, and lower the set temperature (pg. 14).
	The compressor is not on.	The compressor may take up to 3 minutes to turn on, or longer if it is too warm.
	The ambient temperature is too high.	Lower the room temperature to be below 90° F.
	The filter may be dusty or blocked.	Clean the filters (pg. 11).
	The exhaust port is blocked.	Remove any obstructions in the exhaust hose and port.
My air conditioner blows cold air, but does not lower the room temperature.	The unit is not vented.	The unit must be vented (pg. 8).
	The area of the room is too large.	Minimize the size of the area to be cooled, i.e. adding a drop ceiling. Use more than one unit to cool the area, or use a larger unit.
	There are open windows and doors.	Close any open doors or windows.
	There are too many heat sources.	Remove or shut off additional heat sources such as radio equipment, servers, etc.
	The room / garage may be inadequately insulated.	Properly insulate the room to be cooled, i.e. using fiberglass.
	The ambient temperature is too high.	The unit may not work if the room temperature is above 90° F.
	Direct sunlight is heating the room.	Close the curtains or pull down the blinds to minimize the amount of direct sunlight entering the room.
	The filter may be dusty or blocked.	Clean the filter and replace it if needed.
	The condenser coils are dirty.	Carefully vacuum the coils clean.
	The air intake or exhaust ports are obstructed.	Remove anything blocking the ports.



Tip: Run the unit before it is needed. For example, run the unit in the morning before the area gets hot, and continue to run the unit all day long in order to maintain a low temperature.

Error Codes

The air conditioner may display an error code if it is not operating correctly. Below are the list of error codes and their description.

Error Code	Possible Cause	Solution
E5	This is the overcurrent protection.	Disconnect power to the unit, wait 10 minutes, then turn the unit back on. If the "E5" error continues please contact customer service.
H8	The water reservoir is full.	Drain and empty the water reservoir. If the "H8" error continues please contact customer service.
F1	The ambient temperature sensor has a malfunction.	Please contact customer service.
F2	The evaporator temperature sensor has a malfunction.	Please contact customer service.
F0	Refrigerant is leaking or the system is blocked.	Please contact customer service.
H3	This is the overload protection for the compressor	If the unit is working in a high-temperature and high-humidity environment, power off the unit and start it after the ambient temperature drops below 90° F. Also check the evaporator and condenser to ensure they are not blocked by any objects. If the unit still displays the "H3" or "E8" error code please contact customer service.
E8	There is an overload malfunction.	
F4	The outdoor tube temperature sensor is open or short-circuited.	Please contact customer service.

Specifications

Description of product	Portable Air Conditioner
Model	AP16000G
Voltage / Frequency	AC 220 V ~ 60 Hz
Input Power	4835 W
Current	9.7 A
Cooling Capacity (SACC)	10000 BTU
Cooling Capacity (ASHRAE)	16000 BTU
Color	Grey
Coolant	R-410A
Timer	24 Hour
Dimensions H x W x D	33" x 19 3/4" x 18 1/8"
Weight	101.4 lbs.

New Portable Air Conditioner BTU's

You may notice that the cooling capacities (in British Thermal Units or BTU's) labeled on portable air conditioners (PAC's) are now lower than on models produced prior to October 1, 2017. This is because the labeling on new productions of PAC's must follow a new federal test standard that was established by the Department of Energy: 10 CFR 430, subpart B, appendix CC.

The SACC rating shown on your new PAC is a result of this new standard. Models manufactured before 2017 were tested under a different standard (ASHRAE) that produced a higher cooling capacity output. While the SACC BTU's are lower than the previous ASHRAE BTU's, the construction and cooling capacity of this model(s) remains unchanged. Both the SACC and ASHRAE ratings are included for consumer comparison.

What is SACC?

SACC, or the Seasonally Adjusted Cooling Capacity, is a rating in BTU/hour that represents the weighted average performance of a PAC in a number of test conditions, some of which may be more extreme than the average use case, which is then adjusted to account for the effect of infiltration air and duct heat transfer. The factors included in the SACC calculation are why the ratings appear lower, even though the model(s) has not changed.

EdgeStar Limited Warranty

One (1) Year Parts & Ninety (90) Days Labor

This product is warranted by EdgeStar to be free from defective workmanship and materials, subject to any conditions set forth as follows:

WHAT IS COVERED:

LABOR: For a period of NINETY (90) DAYS from the date of original purchase, labor will be performed free of charge at an authorized EdgeStar repair facility. At its option, EdgeStar will repair the product with new or remanufactured parts, or exchange the defective product with a new, refurbished, or remanufactured product. If a product is replaced, it will carry the remaining warranty of the original product. After the ninety (90) day period, EdgeStar will no longer be responsible for labor charges incurred. All defective products and parts covered by this warranty will be repaired or replaced on a mail-in basis to an EdgeStar authorized repair facility.

PARTS: For a period of ONE (1) YEAR from the date of original purchase, EdgeStar will supply new, rebuilt, or refurbished parts free of charge. EdgeStar may request a defective part be returned in exchange for the replacement part. All replacement parts or products will be new, remanufactured, or refurbished. All products and parts replaced by EdgeStar under warranty service become the property of EdgeStar.

This warranty applies to the original purchaser only, and only covers defects in workmanship experienced during operation of the product under normal service, maintenance, and usage conditions. This warranty applies to the purchase and use of this product in residential settings within the contiguous United States of America.

WHAT IS NOT COVERED:

The following limitations apply to the coverage of this warranty. This warranty does not cover:

- Labor charges for installation, setup or training to use the product.
- Shipping damage, and any damage caused by improper packaging for shipment to an authorized service center, and any damaged caused by improper voltage or any other misuse, including abnormal service, handling, or usage.
- Cosmetic damage such as scratches and dents.
- Normal wear and tear on parts or replacement of parts designed to be replaced, e.g. filters, cartridges, batteries.
- Service trips to deliver, pick-up, or repair, install the product, or to instruct in proper usage of the product.
- Damages or operating problems resulting from misuse, abuse, operation outside environmental specifications, uses contrary to instructions provided in the owner's manual, accidents, acts of God, vermin, fire, flood, improper installation, unauthorized service, maintenance negligence, unauthorized installation or modification, or rental or commercial use.
- Labor, service transportation, and shipping charges incurred 91 days or more after the date of original purchase.
- The use of EdgeStar products in commercial or rental settings.
- Optional accessories, attachments, and appearance items.
- Products that have been modified to perform outside of specifications without the prior written permission of EdgeStar.
- Products lost in shipment, or theft.
- Products sold AS IS or from an unauthorized reseller.
- Products that have had their serial numbers removed or defaced. Products with serial numbers that have been invalidated.
- Damage to personal property from use of product.
- Replacement of repair of household fuses, circuit breakers, wiring, or plumbing.

OBTAINING WARRANTY SERVICE:

If you believe your product is defective, contact EdgeStar Customer Support for troubleshooting assistance and warranty service at www.edgestar.com or 1-866-319-5473. Before contacting EdgeStar, have your serial number and proof of purchase available. Once an EdgeStar authorized representative has confirmed that your product is defective and eligible for warranty service, the product must be returned to an EdgeStar repair facility. The purchaser is solely responsible for prepaying all shipping related costs to and from the repair facility. EdgeStar is not responsible for damage resulting from shipper mishandling or improper packaging. Do not return a defective product to the place of purchase. Products received without a return authorization number will be refused.

THIS WARRANTY IS IN LIEU OF ANY OTHER WARRANTY, EXPRESSED OR IMPLIED, INCLUDING WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. TO THE EXTENT ANY IMPLIED WARRANTY IS REQUIRED BY LAW, IT IS LIMITED IN DURATION TO THE EXPRESS WARRANTY PERIOD ABOVE. NEITHER THE MANUFACTURER NOR ITS DISTRIBUTORS SHALL BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY NATURE, INCLUDING WITHOUT LIMITATION, LOST REVENUES OR PROFITS, OR ANY OTHER DAMAGE WHETHER BASED IN CONTRACT, TORT, OR OTHERWISE. IN NO EVENT AND UNDER NO CIRCUMSTANCE OF ANY TYPE OR KIND SHALL THE SELLER, MANUFACTURER AND/OR DISTRIBUTOR BE LIABLE FOR ANY REASON, UNDER ANY THEORY, FOR MORE THAN THE BASIC COST OF THE PRODUCT TO THE PURCHASER OR END USER. SOME STATES DO NOT ALLOW THE EXCLUSION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE.